

**State of California
Air Resources Board**

Method 15

Determination of Hydrogen Sulfide, Carbonyl Sulfide, and Carbon Disulfide Emissions from Stationary Sources

**Adopted: June 2, 1983
Amended: July 1, 1999**

Method 15 - Determination of Hydrogen Sulfide, Carbonyl Sulfide, and Carbon Disulfide Emissions from Stationary Sources

Introduction

The method described below uses the principle of gas chromatographic separation and flame photometric detection (FPD). Since there are many systems or sets of operating conditions that represent useable methods of determining sulfur emissions, all systems which employ this principle, but differ only in details of equipment and operation, may be used as alternative methods, provided that the calibration precision and sample-line loss criteria are met.

1. Principle and Applicability

1.1 Principle. A gas sample is extracted from the emission source and diluted with clean dry air. An aliquot of the diluted sample is then analyzed for hydrogen sulfide (H_2S), carbonyl sulfide (COS), and carbon disulfide (CS_2) by gas chromatographic (GC) separation and flame photometric detection (FPD).

Any modification of this method beyond those expressly permitted shall be considered a major modification subject to the approval of the Executive Officer. The term Executive Officer as used in this document shall mean the Executive Officer of the Air Resources Board (ARB), or his or her authorized representative.

1.2 Applicability. This method is applicable for determination of the above sulfur compounds from tail gas control units of sulfur recovery plants.

2. Range and Sensitivity

2.1 Range. Coupled with a gas chromatographic system utilizing a 1-milliliter sample size, the maximum limit of the FPD for each sulfur compound is approximately 10 ppm. It may be necessary to dilute gas samples from sulfur recovery plants hundredfold (99:1) resulting in an upper limit of about 1000 ppm for each compound.

2.2 Sensitivity. The minimum detectable concentration of the FPD is also dependent on sample size and would be about 0.5 ppm for a 1 ml sample.

3. Interferences

3.1 Moisture Condensation. Moisture condensation in the sample delivery system, the analytical column, or the FPD burner block can cause losses or interferences. This potential is eliminated by heating the probe, filter box, and connections, and by maintaining the SO_2 scrubber in an ice water bath. Moisture is removed in the SO_2 scrubber and heating the sample beyond this point is not necessary provided the ambient temperature is above 0°C . Alternatively, moisture may be eliminated by heating the sample line, and by conditioning the sample with dry dilution air to lower its dew point below the operating temperature of the GC/FPD analytical system prior to analysis.

3.2 Carbon Monoxide and Carbon Dioxide. CO and CO₂ have substantial desensitizing effects on the flame photometric detector even after 9:1 dilution. (Acceptable systems must demonstrate that they have eliminated this interference by some procedure such as eluting CO and CO₂ before any of the sulfur compounds to be measured.) Compliance with this requirement can be demonstrated by submitting chromatograms of calibration gases with and without CO₂ in the diluent gas. The CO₂ level should be approximately 10 percent for the case with CO₂ present. The two chromatograms should show agreement within the precision limits of Section 4.1.

3.3 Elemental Sulfur. The condensation of sulfur vapor in the sampling system can lead to blockage of the particulate filter. This problem can be minimized by observing the filter for buildup and changing as needed.

3.4 Sulfur Dioxide (SO₂). Sulfur dioxide is not a specific interferent but may be present in such large amounts that it cannot be effectively separated from the other compounds of interest. The SO₂ scrubber described in Section 5.1.3 will effectively remove SO₂ from the sample.

3.5 Alkali Mist. Alkali mist in the emissions of some control devices may cause a rapid increase in the SO₂ scrubber pH to give low sample recoveries. Replacing the SO₂ scrubber contents after each run will minimize the chances of interference in these cases.

4. Precision

4.1 Calibration Precision. A series of three consecutive injections of the same calibration gas, at any dilution, shall produce results which do not vary by more than ± 13 percent from the mean of the three injections.

4.2 Calibration Drift. The calibration drift determined from the mean of three injections made at the beginning and end of any run or series of runs within a 24-hour period shall not exceed 5 percent.

5. Apparatus

5.1 Sampling (Figure 15-1).

5.1.1 Probe. The probe shall be made of Teflon or Teflon-lined stainless steel and heated to prevent moisture condensation. It shall be designed to allow calibration gas to enter the probe at or near the sample point entry. Any portion of the probe that contacts the stack gas must be heated to prevent moisture condensation. The probe described in Section 2.1.1 of Method 16A having a nozzle directed away from the gas stream is recommended for sources having particulate or mist emissions. Where very high stack temperatures prohibit the use of Teflon probe components, glass or quartz-lined probes may serve as substitutes.

Note. Mention of trade names or specific products does not constitute an endorsement by the Air Resources Board.

5.1.2 Particulate Filter. 50-mm Teflon filter holder and a 1- to 2-micron porosity Teflon filter (available through Savillex Corporation, 5325 Highway 101, Minnetonka, Minnesota 55343). The filter holder must be maintained in a hot box at a temperature of at least 120°C (248°F).

5.1.3 SO₂ Scrubber.

5.1.3.1 Three 300-ml Teflon segment impingers connected in series with flexible, thick-walled, Teflon tubing. (Impinger parts and tubing available through Savillex.) The first two impingers contain 100 ml of citrate buffer, and the third impinger is initially dry. The tip of the tube inserted into the solution should be constricted to less than 3-mm (1/8-in.) ID and should be immersed to a depth of at least 5 cm (2 in.). Immerse the impingers in an ice water bath and maintain near 0°C. The scrubber solution will normally last for a 3-hour run before needing replacement. This will depend upon the effects of moisture and particulate matter on the solution strength and pH.

5.1.3.2 Connections between the probe, particulate filter, and SO₂ scrubber shall be made of Teflon and as short in length as possible. All portions of the probe, particulate filter, and connections prior to the SO₂ scrubber (or alternative point of moisture removal) shall be maintained at a temperature of at least 120°C (248 F).

5.1.4 Sample Line. Teflon, no greater than 1.3-cm (1/2-in.) ID. Alternative materials, such as virgin Nylon, may be used provided the line loss test is acceptable.

5.1.5 Sample Pump. The sample pump shall be a leakless Teflon-coated diaphragm type or equivalent.

5.2 Dilution System. The dilution system must be constructed such that all sample contacts are made of Teflon, glass, or stainless-steel. It must be capable of approximately a 9:1 dilution of the sample.

5.3 Gas Chromatograph (Figure 15-2). The gas chromatograph must have at least the following components:

5.3.1 Oven. Capable of maintaining the separation column at the proper operating temperature ± 1 °C.

5.3.2 Temperature Gauge. To monitor column oven, detector, and exhaust temperature ± 1 °C.

5.3.3 Flow System. Gas metering system to measure sample, fuel, combustion gas, and carrier gas flows.

5.3.4 Flame Photometric Detector.

5.3.4.1 Electrometer. Capable of full scale amplification of linear ranges

of 10^{-9} to 10^{-4} amperes full scale.

5.3.4.2 Power Supply. Capable of delivering up to 750 volts.

5.3.4.3 Recorder. Compatible with the output voltage range of the electrometer.

5.3.4.4 Rotary Gas Valves. Multiport Teflon-lined valves equipped with sample loop. Sample loop volumes shall be chosen to provide the needed analytical range. Teflon tubing and fittings shall be used throughout to present an inert surface for sample gas. The gas chromatograph shall be calibrated with the sample loop used for sample analysis.

5.4 Gas Chromatograph Columns. The column system must be demonstrated to be capable of resolving three major reduced sulfur compounds: H_2S , COS , and CS_2 .

To demonstrate that adequate resolution has been achieved the tester must submit a chromatogram of a calibration gas containing all three reduced sulfur compounds in the concentration range of the applicable standard. Adequate resolution will be defined as base line separation of adjacent peaks when the amplifier attenuation is set so that the smaller peak is at least 50 percent of full scale. Base line separation is defined as a return to zero ± 5 percent in the interval between peaks. Systems not meeting this criteria may be considered alternate methods subject to the approval of the Executive Officer.

5.5 Calibration System (Figure 15-3). The calibration system must contain the following components.

5.5.1 Flow System. To measure air flow over permeation tubes within 2 percent. Each flowmeter shall be calibrated after a complete test series with a wet-test meter. If the flow measuring device differs from the wet-test meter by more than 5 percent, the completed test shall be discarded. Alternatively, the tester may elect to use the flow data that will yield the lowest flow measurement. Calibration with a wet-test meter before a test is optional. Flow over the permeation device may also be determined using a soap bubble flowmeter.

5.5.2 Constant Temperature Bath. Device capable of maintaining the permeation tubes at the calibration temperature within $0.1^{\circ}C$.

5.5.3 Temperature Gauge. Thermometer or equivalent to monitor bath temperature within $0.1^{\circ}C$.

6. Reagents

6.1 Fuel. Hydrogen (H_2) prepurified grade or better.

6.2 Combustion Gas. Oxygen (O_2) or air, research purity or better.

6.3 Carrier Gas. Prepurified grade or better.

6.4 Diluent. Air containing less than 0.5 ppm total sulfur compounds and less than 10

ppm each of moisture and total hydrocarbons.

6.5 Calibration Gases. Permeation tubes, one each of H₂S, COS, and CS₂, gravimetrically calibrated and certified at some convenient operating temperature. These tubes consist of hermetically sealed FEP Teflon tubing in which a liquified gaseous substance is enclosed. The enclosed gas permeates through the tubing wall at a constant rate. When the temperature is constant, calibration gases covering a wide range of known concentrations can be generated by varying and accurately measuring the flow rate of diluent gas passing over the tubes. These calibration gases are used to calibrate the GC/FPD system and the dilution system.

6.6 Citrate Buffer. Dissolve 300 g of potassium citrate and 41 g of anhydrous citric acid in 1 liter of water. Alternatively, 284 g of sodium citrate may be substituted for the potassium citrate. Adjust the pH to between 5.4 and 5.6 with potassium citrate or citric acid, as required.

6.7 Sample Line Loss Gas (Optional). As an alternative, H₂S cylinder gas may be used for the sample line loss test. The gas shall be calibrated against permeation devices having known permeation rates or by the procedure in Section 7 of Method 16A.

7. Pretest Procedures

The following procedures are optional but would be helpful in preventing any problem which might occur later and invalidate the entire test.

7.1 After the complete measurement system has been set up at the site and deemed to be operational, the following procedures should be completed before sampling is initiated.

7.1.1 Leak Test. Appropriate leak test procedures should be employed to verify the integrity of all components, sample lines, and connections. The following leak test procedure is suggested: For components upstream of the sample pump, attach the probe end of the sample line to a manometer or vacuum gauge, start the pump and pull greater than 50 mm (2 in.) Hg vacuum, close off the pump outlet, and then stop the pump and ascertain that there is no leak for 1 minute. For components after the pump, apply a slight positive pressure and check for leaks by applying a liquid (detergent in water, for example) at each joint. Bubbling indicates the presence of a leak. As an alternative to the initial leak-test, the sample line loss test described in Section 10.1 may be performed to verify the integrity of components.

7.1.2 System Performance. Since the complete system is calibrated following each test, the precise calibration of each component is not critical. However, these components should be verified to be operating properly. This verification can be performed by observing the response of flowmeters or of the GC output to changes in flow rates or calibration gas concentrations and ascertaining the response to be within predicted limits. If any component or the complete system fails to respond in a normal and predictable manner, the source of the discrepancy should be identified and corrected before proceeding.

8. Calibration

Prior to any sampling run, calibrate the system using the following procedures. (If more than one run is performed during any 24-hour period, a calibration need not be performed prior to the second and any subsequent runs. The calibration must, however, be verified as prescribed in Section 10, after the last run made within the 24-hour period.)

8.1 General Considerations. This section outlines steps to be followed for use of the GC/FPD and the dilution system. The procedure does not include detailed instructions because the operation of these systems is complex, and it requires an understanding of the individual system being used. Each system should include a written operating manual describing in detail the operating procedures associated with each component in the measurement system. In addition, the operator should be familiar with the operating principles of the components; particularly the GC/FPD.

8.2 Calibration Procedure. Insert the permeation tubes into the tube chamber. Check the bath temperature to assure agreement with the calibration temperature of the tubes within $\pm 0.1^\circ\text{C}$. Allow 24 hours for the tubes to equilibrate. Alternatively equilibration may be verified by injecting samples of calibration gas at 1-hour intervals. The permeation tubes can be assumed to have reached equilibrium when consecutive hourly samples agree within the precision limits of Section 4.1.

Vary the amount of air flowing over the tubes to produce the desired concentrations for calibrating the analytical and dilution systems. The air flow across the tubes must at all times exceed the flow requirement of the analytical systems. The concentration in parts per million generated by a tube containing a specific permeant can be calculated as follows:

$$C = \frac{K P_r}{M L} \quad \text{Equation 15-1}$$

Where:

C	=	Concentration of permeant produced in ppm.
P _r	=	Permeation rate of the tube in $\mu\text{g}/\text{min}$.
M	=	Molecular weight of the permeant: g/g-mole.
L	=	Flow rate, l/min, of air over permeant @ 20°C , 760 mm Hg.
K	=	Gas constant at 20°C and 760 mm Hg
	=	24.04 l/g mole.

8.3 Calibration of Analysis System. Generate a series of three or more known concentrations spanning the linear range of the FPD (approximately 0.5 to 10 ppm for a 1 ml sample) for each of the three major sulfur compounds. Bypassing the dilution system, inject these standards into the GC/FPD analyzers and monitor the responses. Three injects for each concentration must yield the precision described in Section 4.1. Failure to attain this precision is an indication of a problem in the calibration or analytical system. Any such problem must be identified and corrected before proceeding.

8.4 Calibration Curves. Plot the GC/FPD response in current (amperes) versus their causative concentrations in ppm on log-log coordinate graph paper for each sulfur compound. Alternatively, a least squares equation may be generated from the calibration

data using concentrations versus the appropriate instrument response units.

8.5 Calibration of Dilution System. Generate a known concentration of hydrogen sulfide using the permeation tube system. Adjust the flow rate of diluent air for the first dilution stage so that the desired level of dilution is approximated. Inject the diluted calibration gas into the GC/FPD system and monitor its response. Three injections for each dilution must yield the precision described in Section 4.1. Failure to attain this precision in this step is an indication of a problem in the dilution system. Any such problem must be identified and corrected before proceeding. Using the calibration data for H₂S (developed under 8.3) determine the diluted calibration gas concentration in ppm. Then calculate the dilution factor as the ratio of the calibration gas concentration before dilution to the diluted calibration gas concentration determined under this section. Repeat this procedure for each stage of dilution required. Alternatively, the GC/FPD system may be calibrated by generating a series of three or more concentrations of each sulfur compound and diluting these samples before injecting them into the GC/FPD system. This data will then serve as the calibration data for the unknown samples and a separate determination of the dilution factor will not be necessary. However, the precision requirements of Section 4.1 are still applicable.

9. Sampling and Analysis Procedure

9.1 Sampling. Insert the sampling probe into the test port making certain that no dilution air enters the stack through the port. Begin sampling and dilute the sample approximately 9:1 using the dilution system. Note that the precise dilution factor is that which is determined in section 8.5. Condition the entire system with sample for a minimum of 15 minutes prior to commencing analysis.

9.2 Analysis. Aliquots of diluted sample are injected into the GC/FPD analyzer for analysis.

9.2.1 Sample Run. A sample run is composed of 16 individual analyses (injects) performed over a period of not less than 3 hours or more than 6 hours.

9.2.2 Observation for Clogging of Probe or Filter. If reductions in sample concentrations are observed during a sample run that cannot be explained by process conditions, the sampling must be interrupted to determine if the probe or filter is clogged with particulate matter. If either is found to be clogged, the test must be stopped and the results up to that point discarded. Testing may resume after cleaning or replacing the probe and filter. After each run, the probe and filter shall be inspected and, if necessary, replaced.

10. Post-Test Procedures

10.1 Sample Line Loss. A known concentration of hydrogen sulfide at the level of the applicable standard, ± 20 percent, must be introduced into the sampling system at the opening of the probe in sufficient quantities to ensure that there is an excess of sample which must be vented to the atmosphere. The sample must be transported through the entire sampling system to the measurement system in the normal manner. The resulting measured concentration should be compared to the known value to determine the sampling system loss. A sampling system loss of more than 20 percent is unacceptable.

Sampling losses of 0-20 percent must be corrected by dividing the resulting sample concentration by the fraction of recovery. The known gas sample may be generated using permeation tubes. Alternatively, cylinders of hydrogen sulfide mixed in nitrogen and verified according to Section 6.7 may be used. The optional pretest procedures provide a good guideline for determining if there are leaks in the sampling system.

10.2 Recalibration. After each run, or after a series of runs made within a 24-hour period, perform a partial recalibration using the procedures in Section 8. Only H₂S (or other permeant) need be used to recalibrate the GC/FPD analysis system (8.3) and the dilution system (8.5).

10.3 Determination of Calibration Drift. Compare the calibration curves obtained prior to the runs, to the calibration curves obtained under Section 10.2. The calibration drift should not exceed the limits set forth in Section 4.2. If the drift exceeds this limit, the intervening run or runs should be considered not valid. The tester, however, may instead have the option of choosing the calibration data set which would give the highest sample values.

11. Calculations

11.1 Determine the concentrations of each reduced sulfur compound detected directly from the calibration curves. Alternatively, the concentrations may be calculated using the equation for the least squares line.

11.2 Calculation of SO₂ Equivalent. SO₂ equivalent will be determined for each analysis made by summing the concentrations of each reduced sulfur compound resolved during the given analysis.

$$\text{SO}_2 \text{ equivalent} = \sum (\text{H}_2\text{S}, \text{COS}, 2 \text{CS}_2) d \quad \text{Equation 15-2}$$

Where:

SO₂equivalent = The sum of the concentration of each of the measured compounds (COS, H₂S, CS₂) expressed as sulfur dioxide in ppm.

H₂S = Hydrogen sulfide, ppm.

COS = Carbonyl sulfide, ppm.

CS₂ = Carbon disulfide, ppm.

d = Dilution factor, dimensionless.

11.3 Average SO₂ Equivalent. This is determined using the following equation. Systems that do not remove moisture from the sample but condition the gas to prevent condensation must correct the average SO₂ equivalent for the fraction of water vapor present.

$$\text{Average SO}_2 \text{ equivalent} = \frac{\sum_{i=1}^N \text{SO}_2 \text{ equivalent}_i}{N} \quad \text{Equation 15-3}$$

Where:

Average SO ₂ equivalent	=	Average SO ₂ equivalent in ppm, dry basis.
SO ₂ equivalent i	=	SO ₂ in ppm as determined by Equation 15-2.
N	=	Number of analyses performed.

12. Bibliography

1. EPA Method 15, Determination of Hydrogen Sulfide, Carbonyl Sulfide and Carbon Disulfide from Stationary Sources, CFR40, Part 60, Appendix A
2. ARB Method 16A, Determination of Total Reduced Sulfur Emissions from Stationary Sources (Impinger Method)

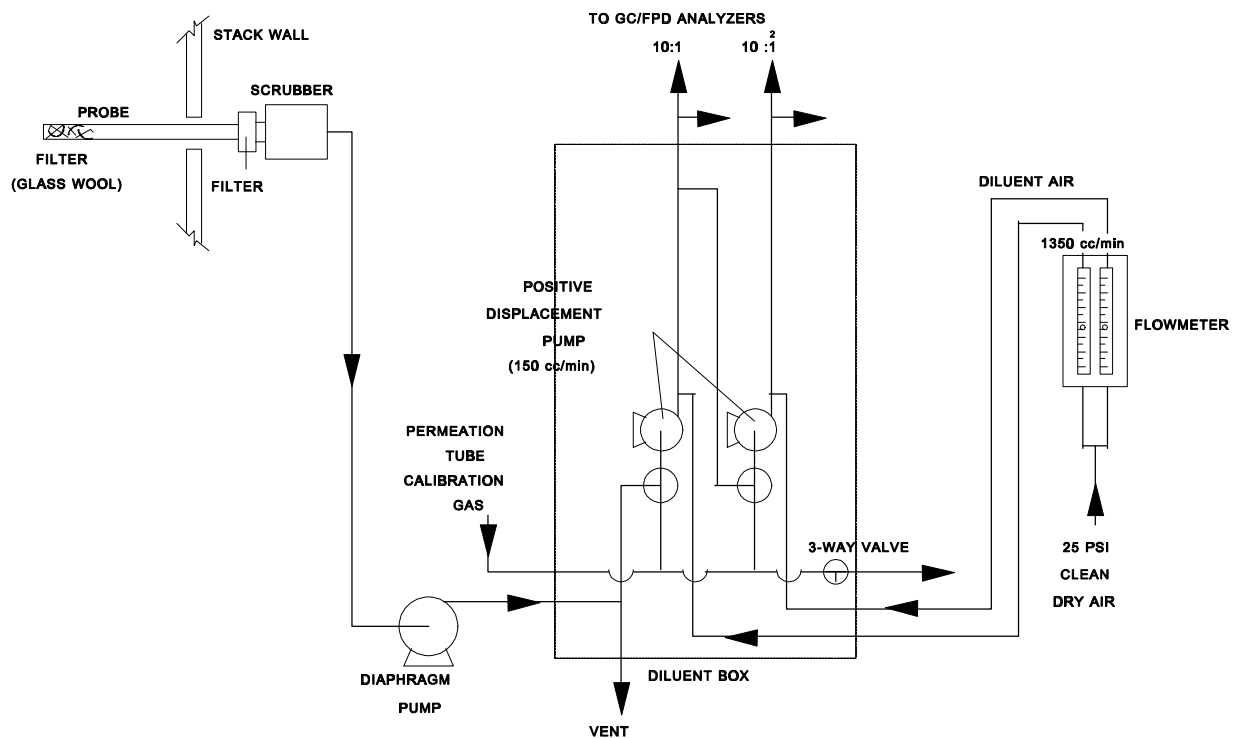


Figure 15-1. Sampling and Dilution Apparatus

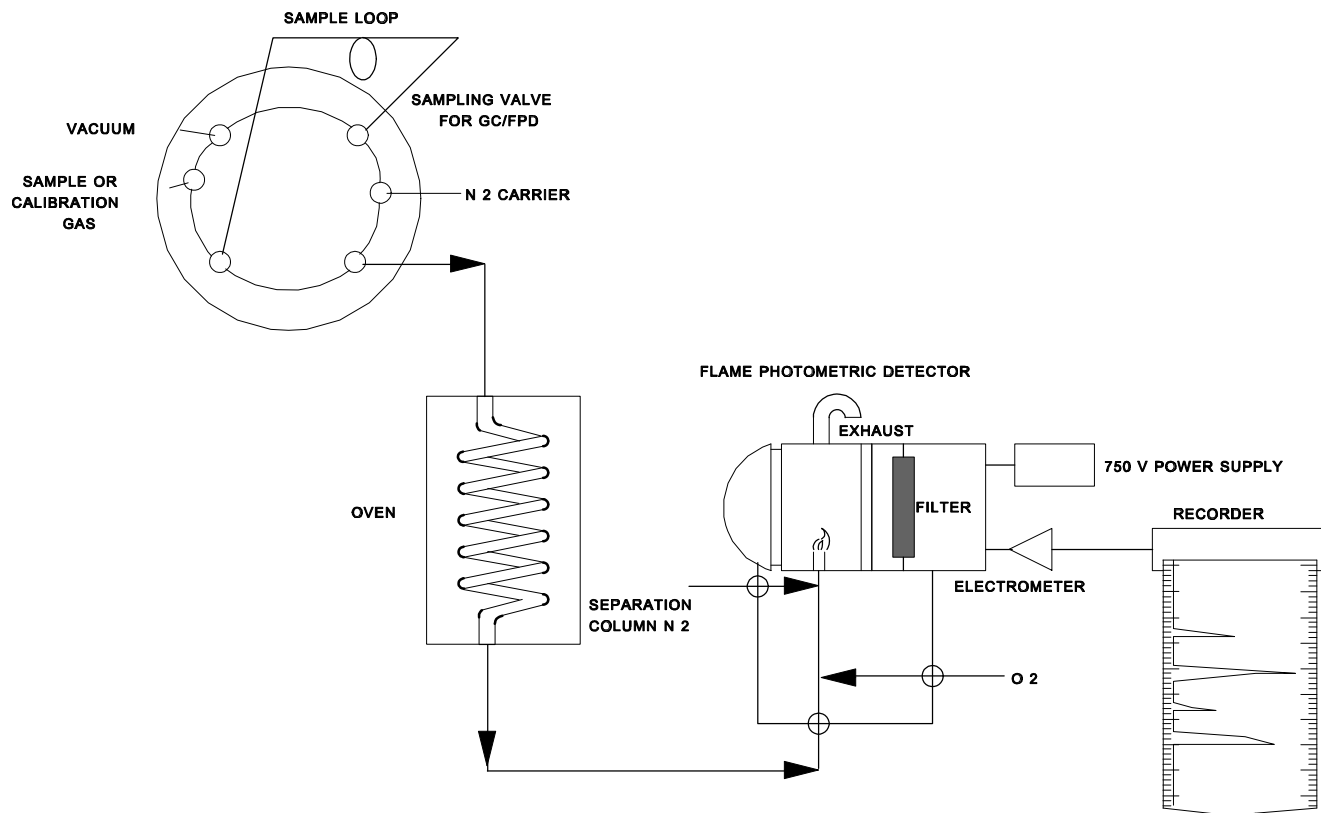


Figure 15-2. Gas Chromatographic Flame Photometric Analyzer

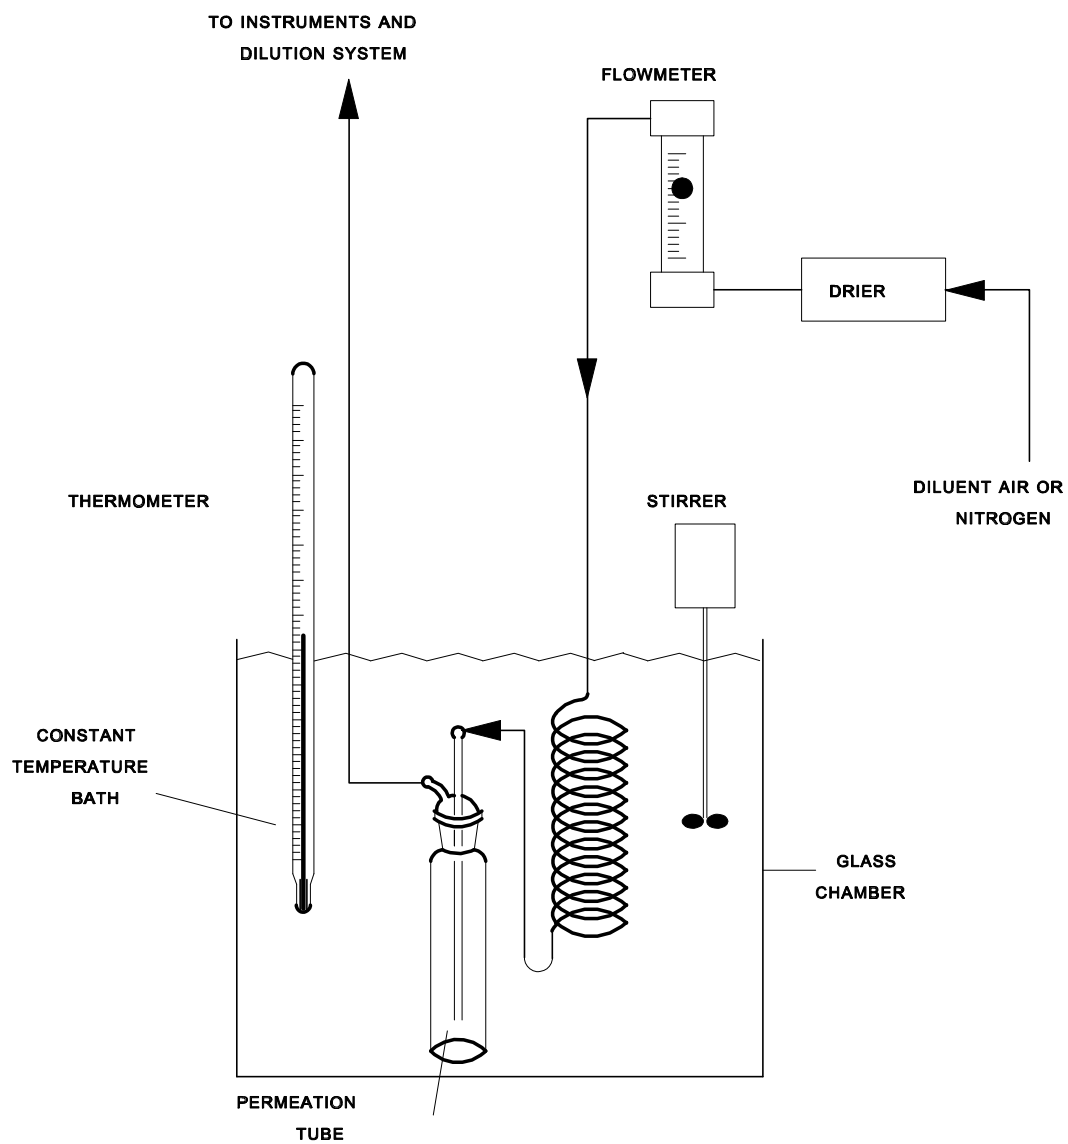


Figure 15-3. Apparatus for Field Calibration